

Component Location



1. Sensor

2. AHS CM

3. AHS CM & Sensor Assembly

AHS sensor assembly(optical fiber sensor and contact sensor) is install in the back beam mounting of bumper that is integrated with AHS CM.