

Verification of Vehicle Repair

After a repair, it is essential to verify that the fault has been corrected.

1. Connect GDS and select "**Diagnostic Trouble Codes(DTC)**" mode.
2. Erase the DTCs and Operate the vehicle within DTC Enable conditions in General information.
3. Is any DTC outputted again?

YES

▶ Go to the applicable troubleshooting procedure.

NO

▶ System performing to specification at this time.